'Click' to download complete Manual

SH ANUAL

ZARM318/S1E

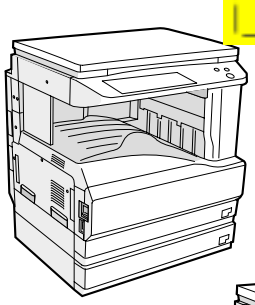

AR-M256/M258
AR-M316/M318
AR-5625/M5631

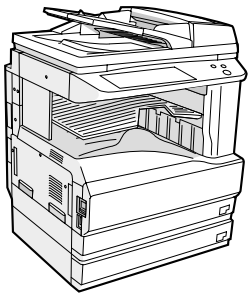

AR-M257/M317

DIGITAL MULTIFUNCTIONAL SYSTEM

MODEL AR-M256/M257 AR-M258/M316 AR-M317/M318 AR-5625/5631

CONTENTS

[1] NOTE FOR SERVICING 1-1

[2] CONFIGURATION 2-1

[3] SPECIFICATIONS 3-1

[4] CONSUMABLE PARTS 4-1

[5] UNPACKING AND INSTALLATION 5-1

[6] EXTERNAL VIEW AND INTERNAL STRUCTURE 6-1

[7] ADJUSTMENTS, SETTING 7-1

[8] SIMULATION 8-1

[9] TROUBLE CODE LIST 9-1

[10] DISASSEMBLY, ASSEMBLY AND MAINTENANCE 10-1

[11] OTHERS 11-1

[12] ELECTRICAL SECTION 12-1

Parts marked with "⚠" are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

SHARP CORPORATION

This document has been published to be used for after sales service only.
The contents are subject to change without notice.

CONTENTS

[1] NOTE FOR SERVICING

1. Warning for servicing 1-1
2. Precautions for servicing 1-1
3. Note for installing site 1-1

[2] CONFIGURATION

1. Line of machines and options 2-1
2. Combination of options list. 2-2

[3] SPECIFICATIONS

1. Basic specifications 3-1
2. Operation specifications 3-1
   - A. Common operation 3-1
   - B. Copy mode 3-1
3. Engine specifications. 3-2
   - A. Operation and display section. 3-2
   - B. Paper feed, transport, paper exit section 3-2
   - C. Optical (Image scanning) section 3-3
   - D. Scanner (exposure) section 3-3
   - E. Image process section 3-3
   - F. Fusing 3-4
   - G. Drive 3-4
4. Additional functions, copy functions, and expanded functions. 3-4
5. Safety and environmental protection standards 3-4
6. Environment conditions 3-5
7. IMC board functions. 3-5
8. Printer function (AR-M256/ M257/ M316/ M317/ 5625/ 5631) 3-6
   - A. “Sharp Printer Language with Compression (SPLC)” Printer function 3-6
   - B. Printer driver specification. 3-6
   - C. Interface 3-8
   - D. System outline. 3-8
9. Printer function (AR-M258/ M318) 3-8
   - A. Basic function 3-8

[4] CONSUMABLE PARTS

1. Supply system table. 4-1
   - A. SEC/ SECL/ LAG 4-1
   - B. Europe/ East Europe/ Russia/ Australia/ New Zealand 4-1
   - C. Asia affiliates 4-1
   - D. SMEF/ Israel/ Philippines/ Agent. 4-1
   - E. Taiwan. 4-1
   - F. Hong Kong 4-1
   - G. China. 4-1
2. Maintenance parts list 4-2
   - A. SDSCA/ SECL/ LAG (AR-M257/ M317) 4-2
   - B. SEEG/ SUK/ SCA/ SCNZ/ SEA/ SEES/ SEZ/ SEIS/ SEB/ SEN/ SEF/ SMEF/ Russia/ Special country (AR-M256/ M316, AR-5625/ 5631) 4-2
   - C. STCL/ SRH/ SRS/ SRSSC/ SBI/ Agent (All model) . . . 4-3
2. Production number identification 4-4
   - <TD cartridge>. 4-4
   - <Drum> 4-4
3. Environment conditions 4-4
   - A. Ambient conditions for transporting. 4-4
   - B. Ambient storage conditions (sealed). 4-4
   - C. Operating ambient conditions 4-4
4. Life (packed conditions). 4-4

[5] UNPACKING AND INSTALLATION

1. Installation. 5-1
   - A. Environment 5-1
   - B. Power source 5-1
   - C. Transport 5-1
   - D. Other precautions. 5-2
2. Removal of protective material and fixing screw 5-2
3. Removal and storage of fixing pin 5-2
4. Developer cartridge installation 5-3
5. Toner cartridge installation 5-3
6. Toner density sensor level adjustment 5-4
7. Tray paper size setting 5-4
   - A. Trays 1 – 4 5-4
   - B. Manual feed tray. 5-4
8. Installation of options 5-5
   - A. AR-P27. 5-5
   - B. AR-PK1N 5-6
   - C. AR-PF1/PF2. 5-7
   - D. MX-NSX1 5-7
   - F. AR-SM5/SM6 5-8

[6] EXTERNAL VIEW AND INTERNAL STRUCTURE

1. Name and function of each section 6-1
   - A. External view 6-1
   - B. Internal structure 6-2
   - C. Operation panel 6-3
   - D. Job status screen (common to copy, print, network scan and fax) 6-4
   - E. Motor, Solenoid, Clutch 6-5
   - F. Sensor 6-5
   - G. PWB unit 6-6
   - H. Section 6-6

[7] ADJUSTMENTS, SETTING

1. List of adjustment items 7-1
2. Copier adjustment. 7-1
   - A. Process section 7-1
   - B. Mechanism section. 7-3
   - C. Image density (exposure) adjustment 7-9

[8] SIMULATION (Diagnostics, setup, adjustment value input, data display)

1. Outline and purpose 8-1
2. Code-type simulation 8-1
   - A. Operating procedures and operations 8-1
   - B. How to change the simulation adjustment value set by the touch panel in the adjustment value entry process. 8-1
3. Simulation code list. 8-3
4. Details. 8-6

[9] TROUBLE CODE LIST

1. List 9-1
2. Self diagnostics 9-2

service-repairmanual.com

[10] DISASSEMBLY, ASSEMBLY AND MAINTENANCE

1. Maintenance table 10-1
   (For 25cpm) 10-1
   (For 31cpm) 10-2
2. Counter clear 10-3
3. List of disassembly and assembly 10-3
4. Details of disassembly and assembly 10-3
   A. Process unit 10-3
   B. Developing section 10-5
   C. Fusing section 10-6
   D. Optical section 10-8
   E. Paper feed section 10-9
   F. Side door unit 10-15
   G. 1st paper exit unit 10-16
   H. 2nd paper exit unit 10-17
   I. Laser unit 10-18
   J. Power unit 10-18
   K. PWB 10-19
   L. Ozone filter 10-21
   M. Drive section 10-21
   N. Transport section 10-23
   O. Operation section 10-24
   P. Switch 10-24

[11] OTHERS

1. Flash ROM version-up procedure 11-1
   A. Program download method
      (for Copier, and fax program) 11-1
   B. Printer Control Board firmware download method . . . 11-2
   C. Others (Troubleshooting) 11-3
2. Key operator program list 11-3
   A. Common program of digital copier 11-3
   B. Copy function setting program 11-4
   C. Printer function setting program 11-4
   D. Network scanner function setting program 11-5
3. E-mail Status/ E-mail Alerts 11-6
   A. Basic functions 11-6
   B. Main body specifications 11-6
   C. Printer controller specifications 11-6
   D. Handling of transmission data 11-6

[12] ELECTRICAL SECTION

1. Block diagram 12-1
2. Actual wiring diagram 12-2

service-repairmanual.com